


T900 Totem Display Unit Assembly Instructions



- 1 Stand the main panel upright so the slotted tabs are facing up then peel back the protective film about 2 inches down.

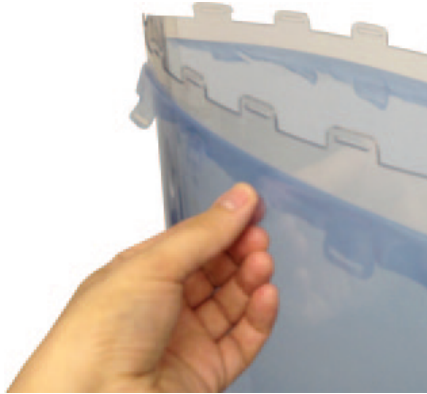

- 2 Position the base assembly over the upright panel so the tabs locate in their corresponding slots through the base.



- 3 Slide the 2 'comb' shaped feet assemblies through the tab slots by first connecting the hook shaped tooth and then pushing the remaining teeth through.



4

Carefully rotate the display into its normal standing position and slide in your printed paper inserts. Peel the protective film completely off both sides.



5

Carefully push the lid into position taking care not to crease the edge of the paper when pushing down.

